


8 FM antenna Select models only

FM signal to computer
调频天线 (仅适用于部分型号)
将调频信号接入电脑

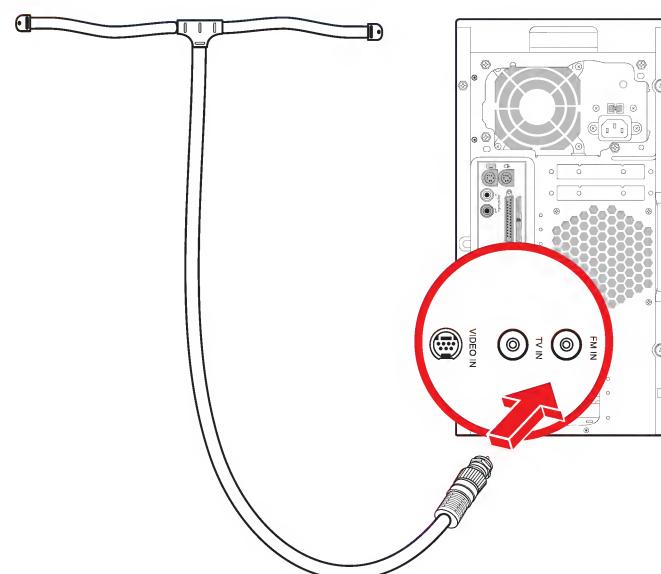


9 Power Connection

Computer to electrical outlet
Grounded connection or connection to surge protector is recommended

连接电源

将电脑连接到电源插座
建议接地或连接电涌保护器。

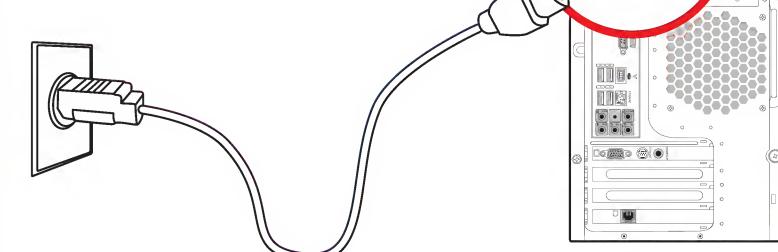


10 Modem / LAN

Connect modem cable to computer.
Select models only.

将调制解调器电缆连接到电脑。
仅适用于部分型号。


Connect your Ethernet cable to computer. Cable not included.
将 Ethernet 电缆链接到电脑。
未提供电缆。

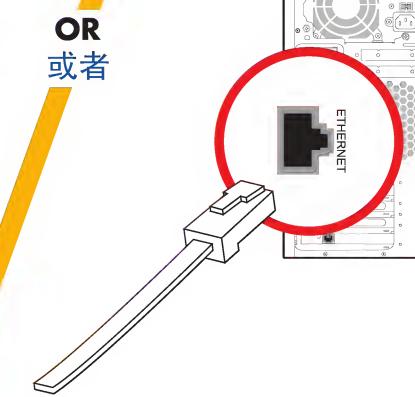

OR 或者





11 Power On

开机

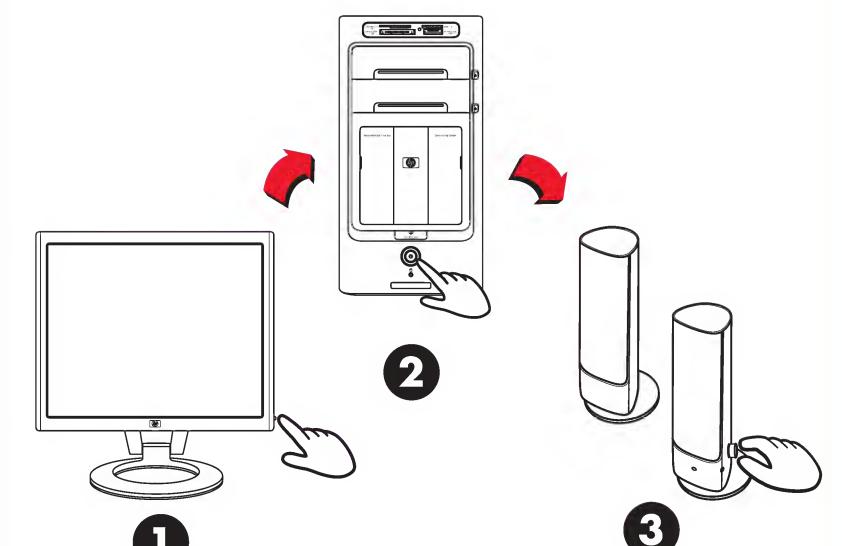


Turn on monitor, computer, and sound system.
打开显示器、电脑，再打开声音系统。

Your PC may look different from the ones shown here. Component, connector location, type, and number vary by model.
您的电脑外观可能与此处图示有所不同。电脑中的组件、接口的位置、类型和数目会因型号而异。

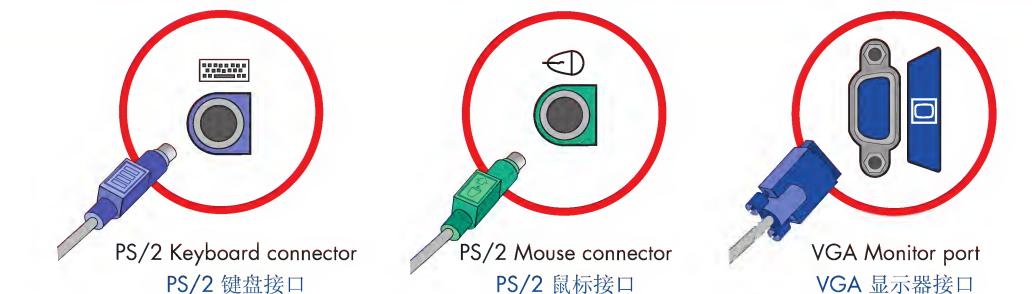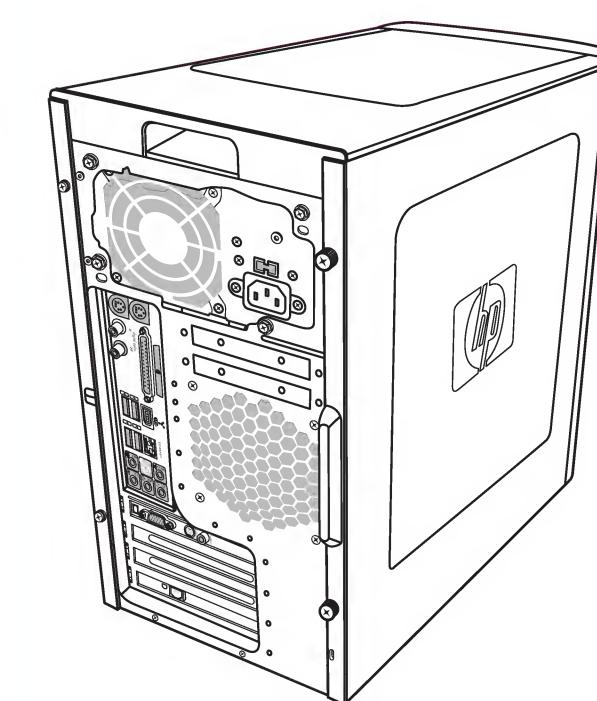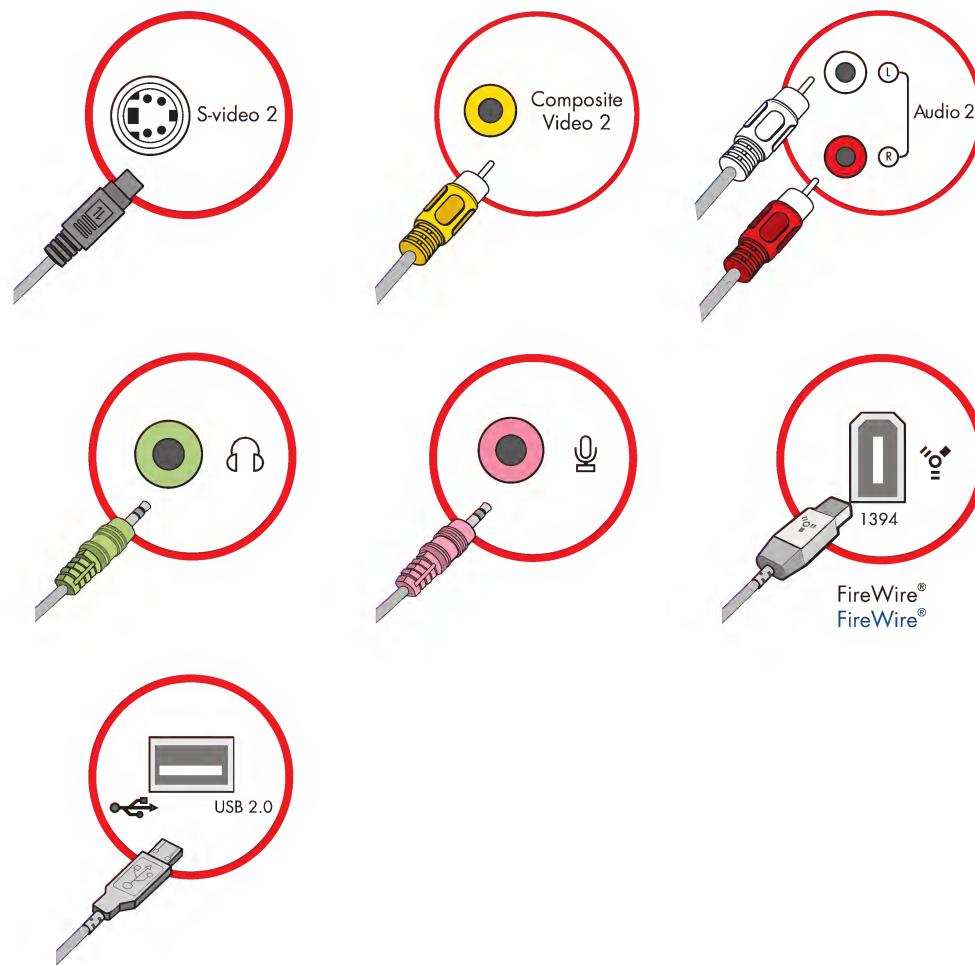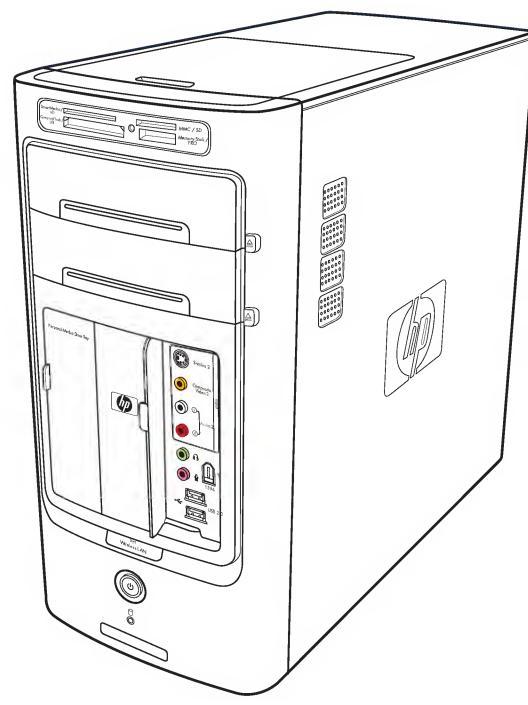


PS/2 Keyboard connector
PS/2 键盘接口

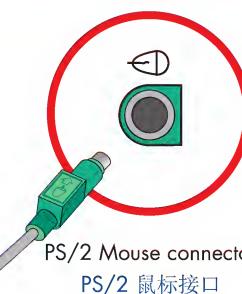


PS/2 Mouse connector
PS/2 鼠标接口




VGA Monitor port
VGA 显示器接口

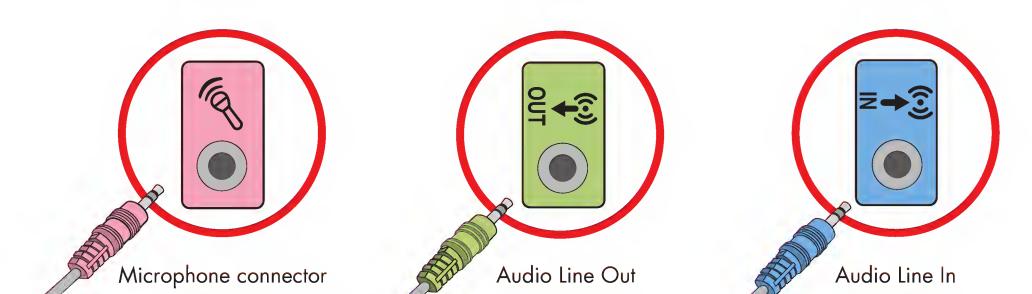


Microphone connector
麦克风接口

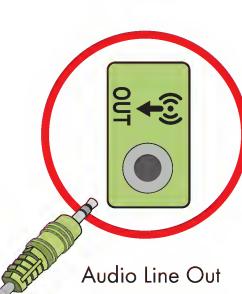


Audio Line Out
音频线路输出

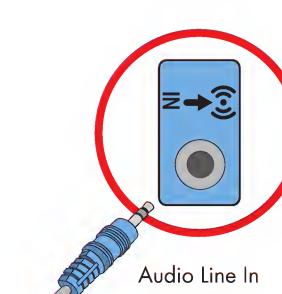


Audio Line In
音频线路输入

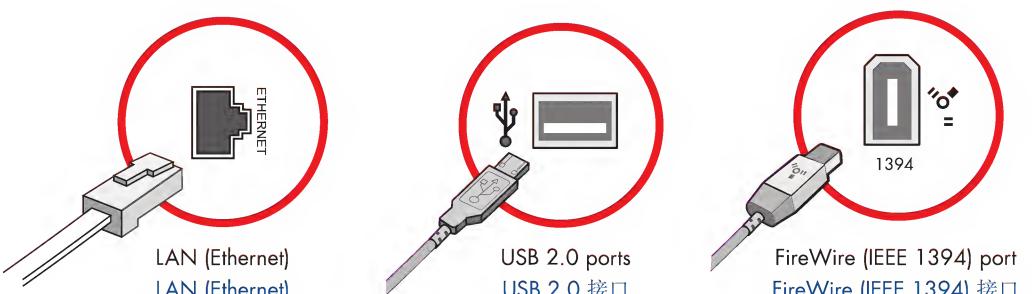


LAN (Ethernet)
LAN [Ethernet]

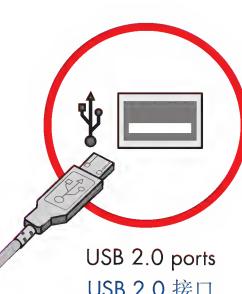

USB 2.0 ports
USB 2.0 接口

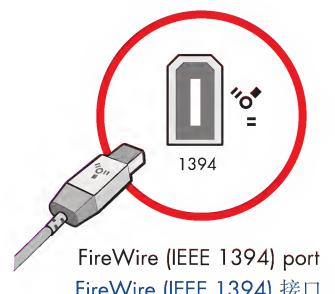

FireWire (IEEE 1394) port
FireWire (IEEE 1394) 接口

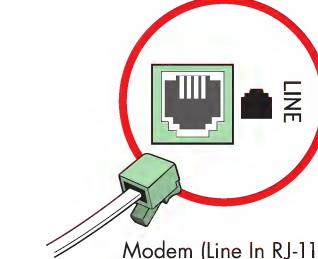


Modem (Line In RJ-11)
调制解调器 (线路输入 RJ-11)




Digital Audio Out
数字音频输出





Digital Audio In
数字音频输入

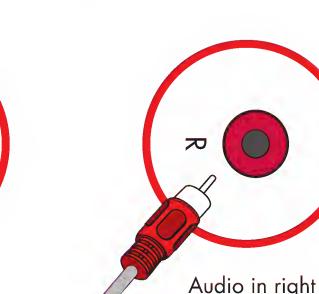


Audio in right
右声道输入

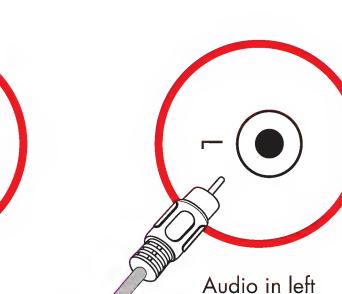


Audio in left
左声道输入

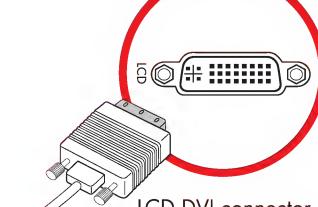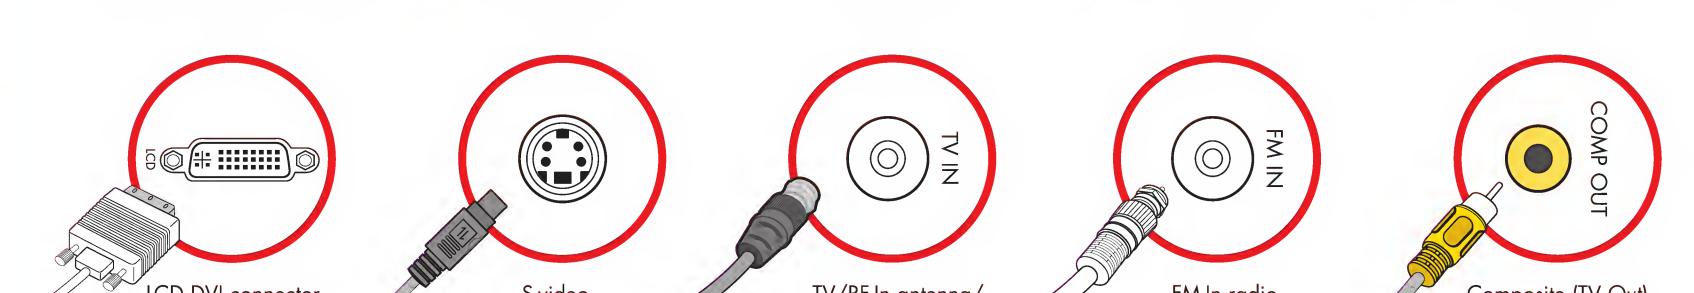


LCD DVI connector
LCD DVI 接口

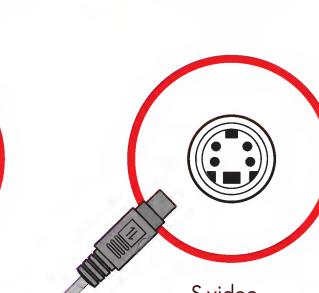


S-video
S-video

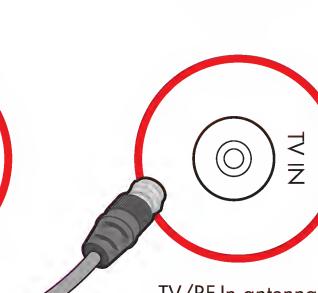

TV/RF-In antenna/
cable connector
TV/RF-天线/电缆输入接口

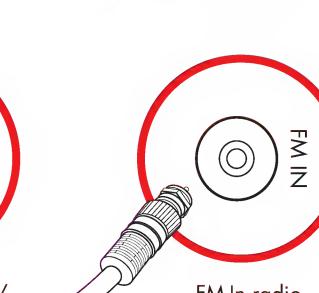

FM-In radio
antenna connector
调频收音机天线输入接口

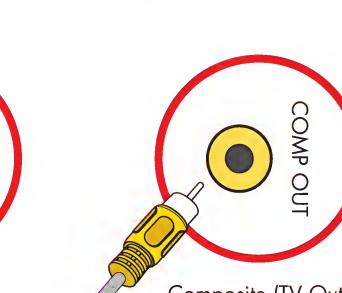

Composite (TV Out)
复合 (电视输出)

China only – 仅适用于中国

激活 Windows XP

您必须在试用期内激活 Windows XP，否则，试用期结束后将无法继续使用 Windows XP。
您可以通过 Internet 或电话激活 Windows XP。激活 Windows XP 的方法是：

- 1 单击“开始”，选择“所有程序”，然后单击“激活 Windows”。
- 2 按屏幕上的说明进行操作。您必须输入电脑的 Windows XP 标签上的 25 位产品密钥号。

注意：执行“系统还原”或“系统还原”之后，必须重新激活 Windows XP。

